



# **How To Set Up an AlazarTech ATS<sup>®</sup>RM3801**

**Table of Contents**

1.0. Introduction ..... 3

2.0. System Setup..... 3

Appendix - System Components ..... 7

## 1.0. Introduction

The AlazarTech ATS®RM3801 is a compact single slot x8 Gen3 PCIe Expansion System that enables you to connect to a host computer. The AlazarTech ATS®RM3801 is connected via dual OcuLink cables to an AlazarTech ATS®P2C3x8 adapter installed in an x8 Gen3 PCIe expansion slot in the host computer's motherboard.

The system is turned on/off by the power switch on the host computer.

## 2.0. System Setup

- Remove the screws from the cover of the AlazarTech ATS®RM3801.



**Figure 1.** AlazarTech ATS®RM3801 Enclosure




**Figure 2.** AlazarTech ATS®RM3801 Interior

- Remove the PCIe bracket screw in the enclosure and install your AlazarTech digitizer board in the AlazarTech ATS®RM3801.



**Figure 3.** AlazarTech ATS®RM3801 with AlazarTech ATS®9373 Digitizer Board Installed

- Adjust the L-shaped hold-down bracket to exert light pressure on the top edge of the digitizer board. Do not force it.
- Tighten the #4-40 screw to secure the L-shaped bracket.

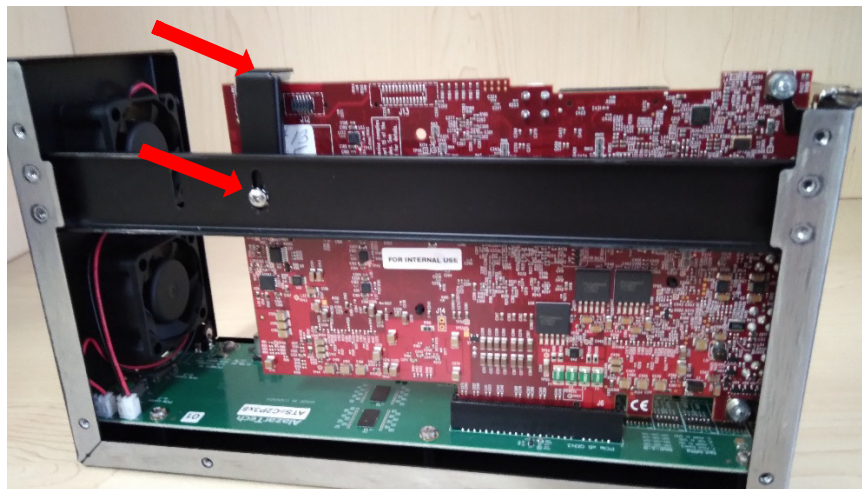

**Figure 4.** AlazarTech ATS®RM3801 L-Shaped Hold-down Bracket Adjustment

- Install the AlazarTech ATS®P2C3x8 Host adapter in an x8 Gen3 PCIe expansion slot in the host computer.

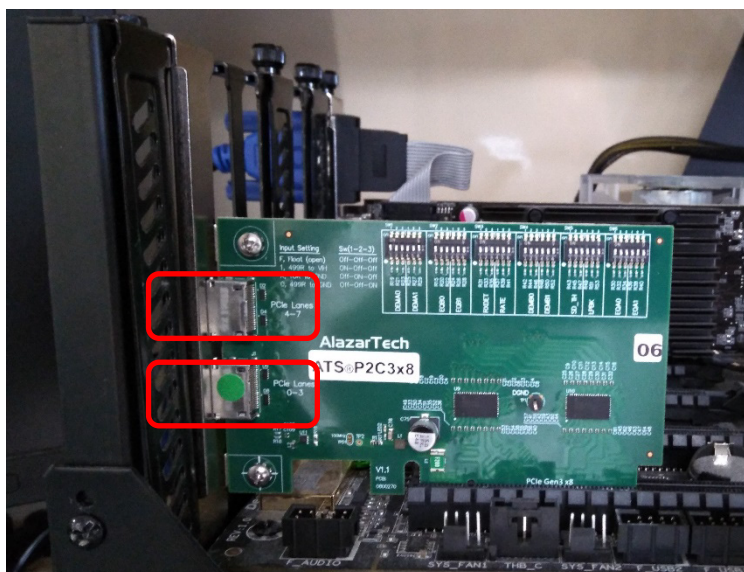


Figure 5. ATS®P2C3x8 Host Adapter

- Connect the dual OcuLink cables from the AlazarTech ATS®P2C3x8 host adapter to the AlazarTech ATS®RM3801.

**Note: The connection order is important!**

See Figure 6 below for further explanation.



Figure 6. ATS®RM3801 Rear View

- Using one of the OcuLink cables, connect PCIe Lanes 0-3 on the AlazarTech ATS®P2C3x8 host adapter to PCIe Lanes 0-3 on the AlazarTech ATS®RM3801. See Figure 5 and Figure 6 for lane identification.
- Using the other OcuLink cable, connect PCIe Lanes 4-7 on the AlazarTech ATS®P2C3x8 host adapter to PCIe Lanes 4-7 on the AlazarTech ATS®RM3801. See Figure 5 and Figure 6 for lane identification.
- Connect the AC power adapter (24VDC) to the power jack on the rear panel of the AlazarTech ATS®RM3801.



**Figure 7.** AC Power Adapter


- Switch-on the host computer. The ATS®RM3801 will power up automatically.



## Appendix

### -

## System Components

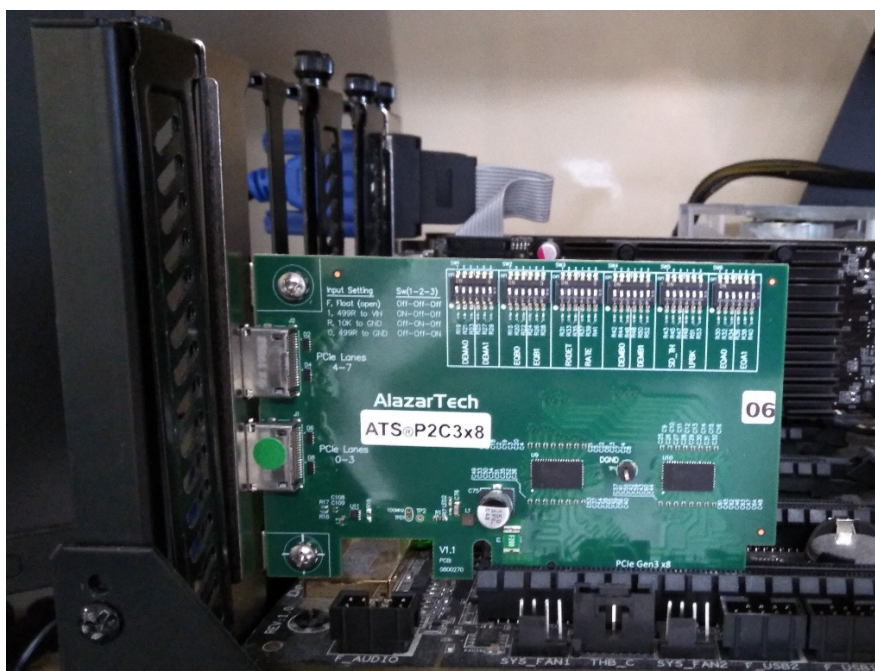

**Figure A.** ATSP2C3x8 Host Adapter



**Figure B.** ATSRM3801 Enclosure with Digitizer Installed (Digitizer not included)



**Figure C.** OCuLink Cables





**Figure D.** AC Power Adapter(24VDC) and Power Cord